MIDMARK®

Installation Instructions

9A108002, 9A108003 Heater Field Retrofit Kit

For Domestic 100 [104], 105, 107, 108 units and Export [with receptacles] 100 [104], 105, 107, 108

Serial Numbers:

(Domestic) 100 [104] BS8279 to Present, 105 CF1323 to Present, 107 CH1275 to Present, 108 BT2154 to Present

(Export) 100 [104] DD1000 to Present, 105 CA1000 to Present, 107 CA1000 to Present, 108 DD1000 to Present

1. Unplug the power cord from the outlet.

WARNING **EQUIPMENT ALERT**

Attempting this installation without disconnecting the power cord from the wall receptacle could result in personal injury or equipment damage.

2. Remove the drawers from the foot end of the table. For tables without the pelvic lift, remove the two screws that hold the seat to the upper wrap; this will allow the seat to pivot up. Remove the stirrup guide and loosen the back cover to allow access to the upper wrap. (Retain parts and hardware.)

3. Remove the cap (1) from the stirrup channel (2) where the heater switch is to be installed. Remove any tape residue.

4. Install the 5/8 " diameter snap bushing (3) in stirrup channel (2).

5. From bottom of upper wrap (same side as heater will be installed), install the 9/16" diameter snap bushing (4).

6. Run heater wires though the center "X" notch of heat shield (5). Align heat shield (5) to heater plate (6), insert two #10-24 x 5/8" self tapping screws (7) through the heater plate (center holes) and heat shield. From the bottom of the upper wrap, run the heater wires up through the snap bushing (4). Align the screws with the holes and fasten the heater plate (6) in place. Avoid pinching the heater wires.

WARNING **EQUIPMENT ALERT**

Assemble the heater plate (6) with the heating element facing toward the upper wrap and the heat shield (5). The heating element should not be exposed. Failure to assemble the heater plate correctly could result in personal injury or equipment damage.

7. Tilt the seat back to expose the top of the upper wrap and then prop the seat up. Pull slack from the heater wires through the hole in the upper wrap and then route through the 5/8" snap bushing (3) and through the notch-out in the front of the stirrup channel (2).

8. Apply the hot label (8) to the stirrup channel (2). Align the hole in the hot label with the hole in the stirrup channel.

9. Route the end of the wire cable (11) (the end with the terminals) through the stirrup channel (2). Route the other end of the wire cable along the path of the upper wrap (shown in illustration).

10. Remove the receptacle cover and the receptacle to allow access for wiring. Connect the ends of the wire cable (11) as shown in illustration. Reinstall the receptacle and its cover.

11. Connect the wire cable (11) leads (with terminals) and heater plate (6) leads, which have been routed through the stirrup channels (2), to the heater switch (9).

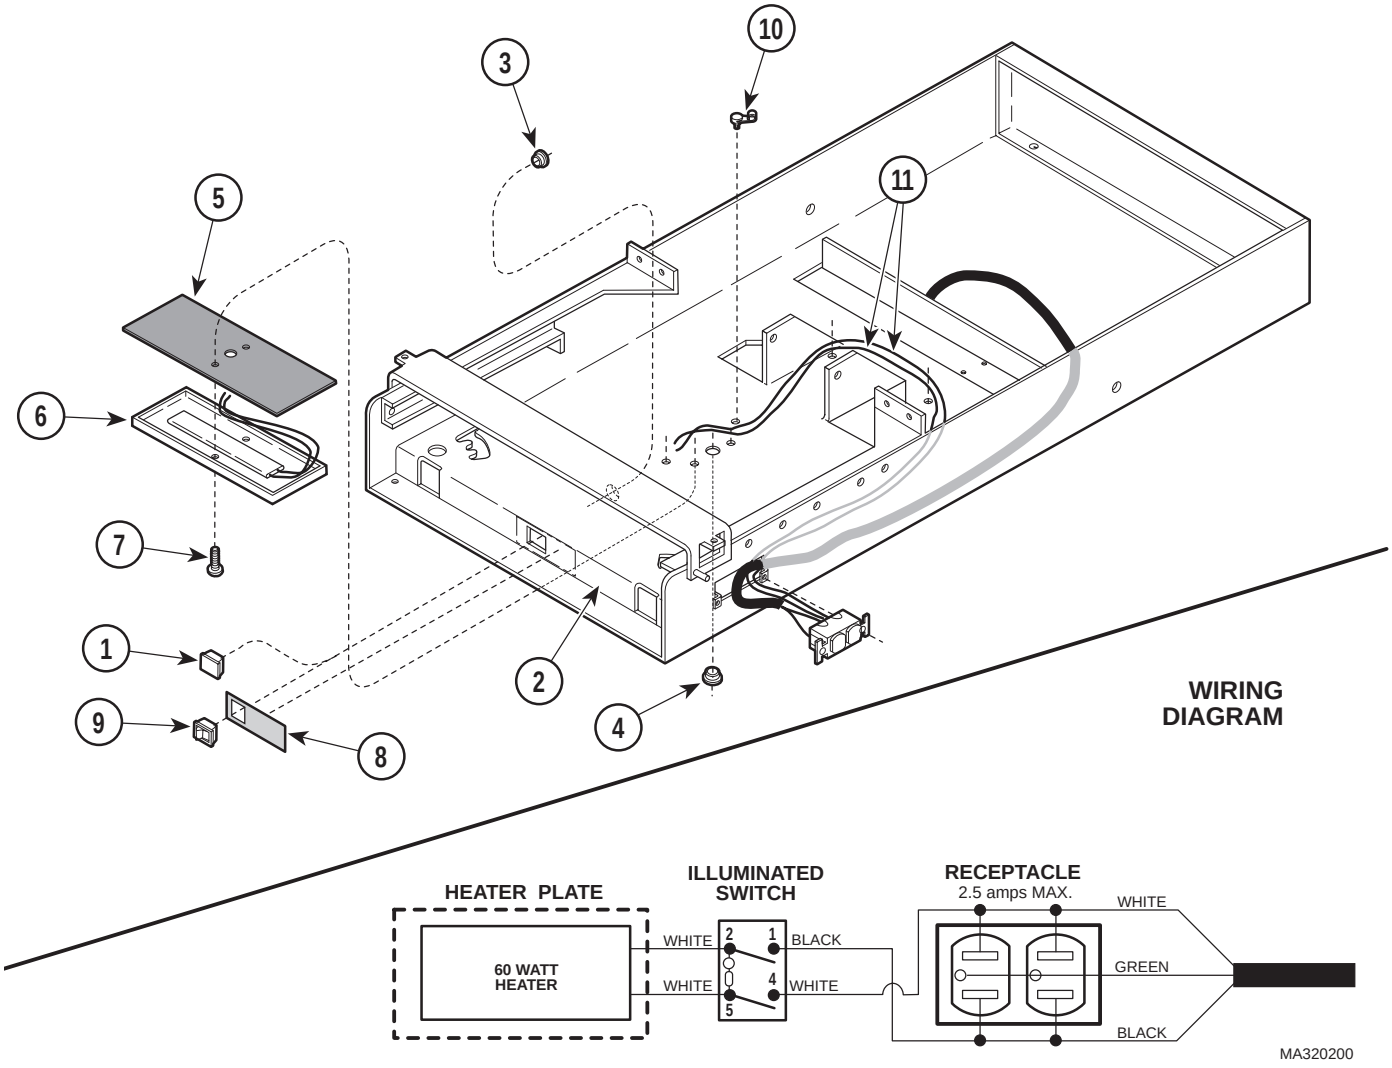

FIGURE 1. 9A108002 (Shown), 9A108003 HEATER - FIELD INSTALLATION

NOTE

Check the heater plate for proper operation prior to snapping the heater switch (9) into place. To check operation, plug the power cord into a wall receptacle and turn the heater switch to ON. The heater switch should illuminate and the heater plate should warm.

12. Unplug the power cord from the wall receptacle.

13. Snap the heater switch (9) into the stirrup channel (2), making sure the orientation of the ON/OFF label (8) is correct.

14. Use the wrap-n-tap wire clamps (10) to secure the heater wire and the wire cable in the upper wrap. Use the cable ties to secure the wire cable to the power cord.

15. Run the back section up and down while checking for proper clearance between wires and counterbalance springs.

16. Reinstall the back cover, the stirrup guide, the drawers, and the seat retaining screws (if applicable).

17. Plug the power cord into the wall receptacle.

© Midmark Corporation - 1996

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542